


Step 1


1st coat is embossed
Surfaceform finish

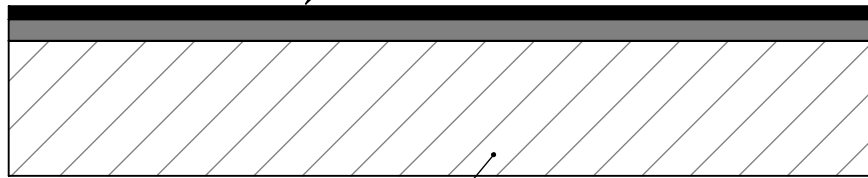

12.5mm Plasterboard

Step 2

Attach stencil

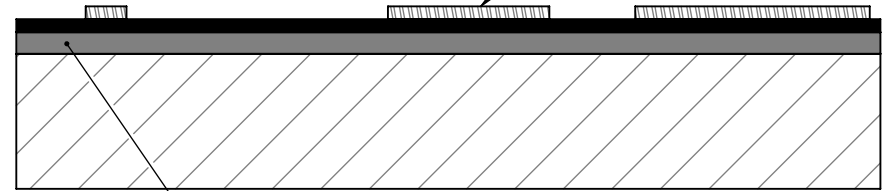


Skimmed/ Taped and jointed
as per specific product requirement

Step 3


Apply finish coats
(raised area)

Stencil

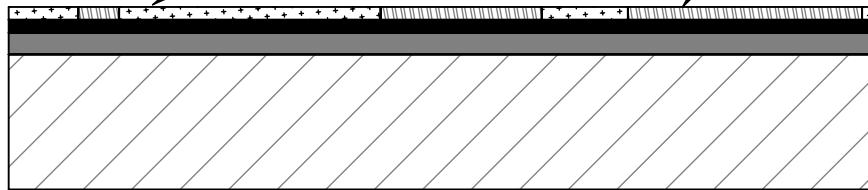

Step 4

Once stencil is removed the lower
level is visible giving an embossed effect

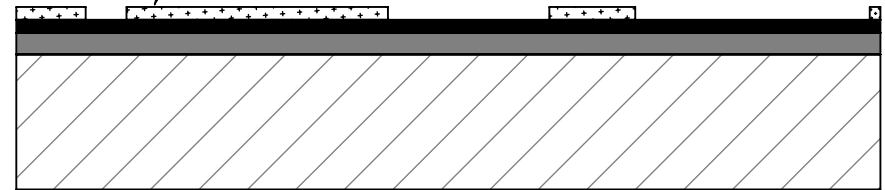

DO NOT SCALE DRAWING

surfaceform

Stencil detail

Ref:

SD011D